

Speakerphone Paging

Speakerphone paging allows a caller to broadcast their voice over the telephones to reach multiple people simultaneously in a designated area. It is often used for announcements, emergency notifications, or general communication purposes where it's necessary to address a large group of people at once without individually calling each person. This feature can be using in conjunction with a public address (PA) system or without. Speakerphone paging can be initiated either by dialing a specific code or pressing a designated button on the telephone device that supports this feature. Once activated, the caller's voice is transmitted through the speakerphones of all connected devices within the paging zone, allowing everyone in that area to hear the message.


To set up Speakerphone page option, users will have to login to their Self Care Portal <https://ux.firelinecommunications.com> and edit Enhanced Services, enabling Speakerphone Page.

Each service has two or more accessibility options:

 Unavailable  Available  PIN Required  Edit

1. If enabling for the first time, click the green checkmark then click save.

The screenshot shows the 'Services' configuration page in the UX Fireline Communications web interface. The 'Speakerphone Page' service is highlighted with a red box. The interface includes a navigation menu with options like Dashboard, My Details, Directory, Services, CDR, SMS Report, Central Phone Book, and Meetings. The 'Speakerphone Page' service is currently set to *399/400 and has an edit button (pencil icon) next to it.

2. Click the edit button 

3. Enter the extensions, separated by commas, of the extension you want to include when using the page button.

The screenshot shows the 'Speakerphone Page' configuration form. The 'Enter extensions here (Comma-Separated):' field contains the text '2005,2016,3001,3004,2022,2017'. There is a 'Quiet mode' checkbox and 'Save' and 'All enhanced services' buttons.

4. Once complete click the save key.

5. To test dial *399 or press the preprogrammed Page key.

** Quiet Mode: Quiet mode allows the user to page phones without anyone hearing the paging entry or exit tone.

Version 01.02022024