

# Viking CTG-1 Programming

Vikings model CTG-1 is a clock-controlled tone generator designed to provide accurately timed bong alert tones or buzzer alert tone sounds over an existing paging system.

## Setting the Clock Time

1. Press the **MODE** button repeatedly until the **TIME** indicator lights
2. Increase or decrease the clock time by pressing the + or -/**CANCEL** button until the desired time is displayed. Press and hold the + or -/**CANCEL** button to speed up the selection
3. Leave the set time mode by pressing the **MODE** button.

## Setting the Day of the Week

1. Press the **MODE** button repeatedly until the **DAYS** indicator lights.
2. A flashing "**A**" (without "on" or "of" displayed) indicates today's day has not been set (or power was lost for more than 4 days). The day of week has already been set if a flashing number (1-7) plus "on" or "of" are displayed.
3. Select today's day of the week using the **TIME** (+ and -/**CANCEL**) buttons. As a general rule, Sunday is day 1 and Saturday is day 7. When today's day of the week is flashing on the display, set it by pressing the **DOUBLE** alert tone button. A confirmation beep will be heard and today's day number and "on" or "of" will now be displayed.

# Setting Timed Alert Tones



1. Press the **MODE** button until the red light goes to Set Events
2. Press the + button to select the desired time
3. Press the Alert Tone you would like to associate with the time you just set.
  - a. **SINGLE**
  - b. **DOUBLE**
  - c. **TRIPLE**
4. When complete press the **MODE** button until the red light goes to Lock.

## Removing a Timed Alert

1. Removing a Timed Alert Tone
2. Press the **MODE** button until the red light goes to **REVIEW/CANCEL**
3. Select the **ALERT** tone associated with the time you would like to remove until you see the time on the display.
4. Press the -/+ **CANCEL** button to remove the time.
5. When complete press the **MODE** button until the red light goes to Lock.

