

Yealink-Setting Up Wi-Fi on the Telephone

For T31W T34W T53W T54W T57W

1. Go to Menu > Basic > WiFi
 - On the T53W Telephones Go to Menu > Settings > Basic > Wi-Fi
2. Select Wi-Fi and press the right arrow to change the setting to On.
3. Select Save
4. Select Available Networks
5. Select Enter
6. Select the desired WiFi network
7. Select Connect.
8. Enter your WiFi password
9. Select OK

For VP 59 T58A T58W CP925 CP935W CP965

1. Do one of the following:
 - Swipe down from the top of the screen.
 - Swipe left or right to go to the second idle screen, go to **Settings > Basic Settings > Wi-Fi**
2. Turn On the Wi-Fi
3. Select Available Networks
4. Select Enter
5. Select the desired WiFi network
6. Select Connect.
7. Enter your WiFi password
8. Select OK

For T4X

1. Insert the Wi-Fi USB dongle into the USB port on the

back of the telephone.

- The phone will prompt you to scan the Wi-Fi devices right now.

2. Select OK
3. Select Wi-Fi and press the right arrow to change the setting to On.
4. Select Save
5. Select Available Networks
6. Select Enter
7. Select the desired WiFi network
8. Select Connect.
9. Enter your WiFi password
10. Select OK

Add a Wireless Network Manually

1. Go to Menu > Basic > WiFi
 - On the T53W Telephones Go to Menu > Settings > Basic > WiFi
2. Select Wi-Fi and press the right arrow to change the setting to On.
3. Press the Save button.
4. Select Known Network(s)
5. Select Add
6. Select the Security Mode which matches your WiFi router
7. Enter the WiFi network name and password required to log into your WiFi network
8. Select Save

Last Updated on March 11, 2025