Yealink – Removing a DSS Keys using the Web Interface

For users who are programming their phones via the telephone interface or web interface. If you are using auto provisioning please make any updates through the provisioning console.

From the telephone you want to make the changes from press and release the OK key.



- 1. Record the IPv4 address of the telephone and move to a computer for programming.
- 2. Open your favorite browser window and enter the IP address recorded from the telephone in the address bar in the format of https://xxx.xxx.xxx.and press enter.



- 3. You may receive an error page regarding the certificate. If you are unsure how to proceed please see <u>Yealink</u> – <u>Phone Web Interface Issue</u>
- Enter the username and password of the telephone and click Login. If you do not know the login information to your telephone please open a <u>support ticket</u>.

Vesiniki 1270 Phone x +	a the lawse is a star law of the star law of t	A' 13 @ @ Ø O O	- ○ × - ○ ×
	Login Enterprise IP Phone SIP-T27G Username Password Login Cancel		

5. Once logged in click the Dsskey Tab.

Vealink Ima	Logout English (English) 🗸					
	Status Account Net	work Dsskey Featu	ures Settings Directory Security			
Status	Version 🕜		NOTE			
Wi-Fi Status	Firmware Version Hardware Version	69.84.0.125 69.0.0.0.0.0	Version It shows the firmware version			
	Device Certificate 💡		and hardware version. Network It shows the network settings of			
	Device Certificate	Factory Installed	It shows the network settings of Internet (WAN) port.			
	Internet Port	IPv4	It shows the registration status of SIP accounts.			

6. From the Dsskey Tab you will have access to updating any of your keys. The left menu displays Line Keys, Programmable Keys and Ext Keys*** If your telephone are programmed using Auto Provisioning you will notice that there are keys that have been pre-programmed. We suggest you do not change these keys manually through the telephone. See <u>Self-Care Portal Guide</u> for additional programming details.

Yealink	Logout English (English) 🗸						
	Status	Account	Network	Dsskey	eatures	Settings	Directory Security
Line Key1-7	Enable Page Tip	s Enabled 🗸	•				NOTE
	Key	Туре	Value	Label	Line	Extension	Key Type
Line Key8-14	Line Key1	Line 🗸	Default	✓ Yealink T27G	Line1	~	The free function key 'Types' Speed Dial, Key Event, Intercom.
Line Key15-21	Line Key2	Line 🗸	Default	✓ Yealink T27G	Line1	~	Key Event
Programmable Key	Line Key3	N/A 🗸			N/A	~	Key events are predefined shortcuts to phone and call functions
	Line Key4	N/A 🗸			N/A	~	Tunctions.
Ext Key	Line Key5	BLF ¥	701	701	Line1	•	Enable the 'Intercom' mode and it is useful in an office
	Line Key6	BLF 🗸	702	702	Line1	~	environment as a quick access to
	Line Key7	BLF ¥	703	703	Line1	•	secretary.
			Confirm	Cancel			Click here to get more product documents.

- 7. Select the Type drop down next to the Key you want to remove.
- 8. Change the Type by selecting "N/A"

9. Click Confirm.

10. The phone will be immediately updated with this change.